

# 3000 Fifth Wheel Instruction Manual

## 4.3 Spare Parts

### Repair Kit Cast 59013581

Item	Description	Qty.
<b>Locking Mech. Kit 59013687</b>		
9	Lockbar & Jaw Pivot	2
10	Spring Clip	2
11	Lockbar	1
12	Jaw Kit (incl. tube)	1
13	Main Spring	1
14	Jaw Spring	1


Item	Description	Qty.
<b>Wear Ring Kit 59015237</b>		
15	M12 HD Screw & Washer 4 x 4	4
16	Wear Ring	1

### Arch Liner Kit 59015059

Item	Description	Qty.
19	Arch Liner	2

### Wear Pad Kit 59014846 300LM ONLY

Item	Description	Qty.
20	Wear Pads	2
21	Bolts	16
22	Spring Washer	16

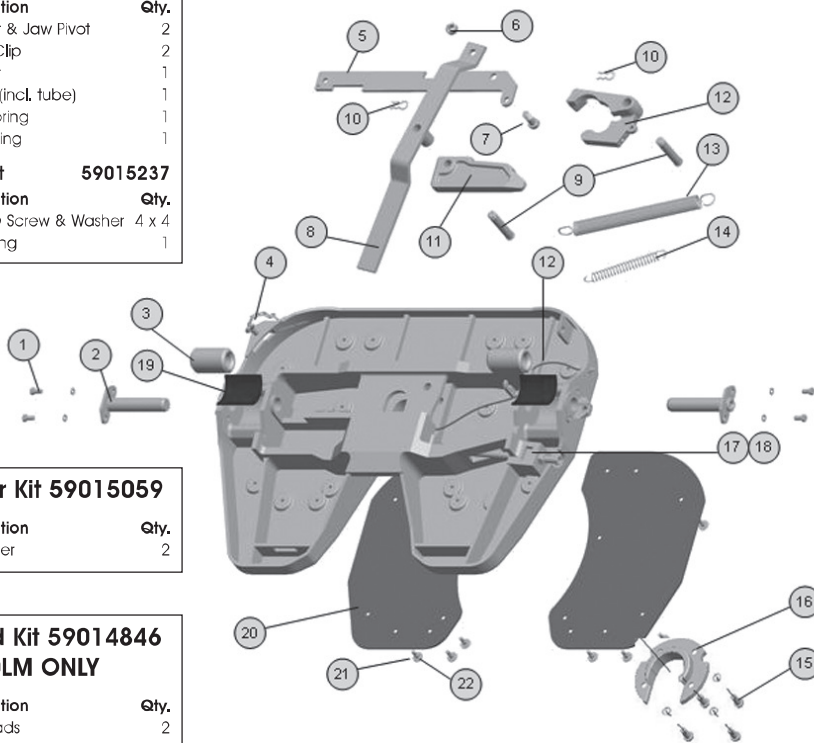

### Spare Part Kits:-

Item	Description	Qty.
<b>Pivot &amp; Bush Kit 59013196</b>		
1	M10 Bolt & Washer	4 x 4
2	Pivot Pin	2
3	Rubber Bush	2

Item	Description	Qty.
<b>Safety Clip Kit 59004114</b>		
4	Safety Link & Clip	1

Item	Description	Qty.
<b>Release Handle Kit 59015258</b>		
5	Release Handle	1
6	M16 BINX Nut	1
7	M16HEX HD Bolt	1

Item	Description	Qty.
<b>Lever Assembly Kit 59015257</b>		
6	M16 BINX Nut	1
7	M16HEX HD Bolt	1
8	Lever Assy	1
9	Lockbar & Jaw Pivot	1
10	Spring Clip	1

Item	Description	Qty.
<b>Spring Kit 59015067</b>		
13	Main Spring	1
14	Jaw Spring	1

Item	Description	Qty.
<b>Adjuster Kit 59015256</b>		
17	Adjuster Stud Assy	1
18	Adjuster Stud Nut	1

